


## dc simulation

DC 1

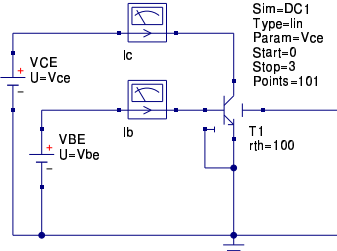

## Parameter sweep

SW1  
Sim=DC 1  
Type=lin  
Param= $V_{ce}$   
Start=0  
Stop=3  
Points=101

## Parameter sweep

SW2  
Sim=SW1  
Type=lin  
Param= $V_{be}$   
Start=0.8  
Stop=0.9  
Points=6